









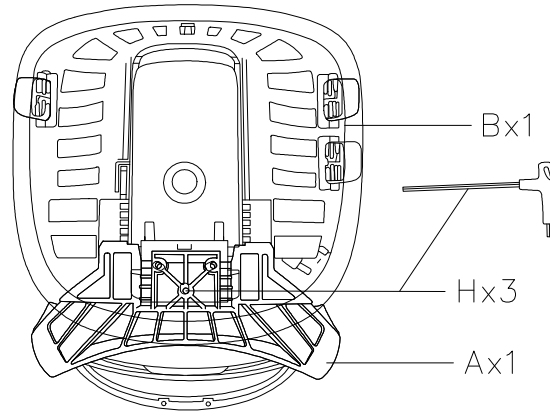
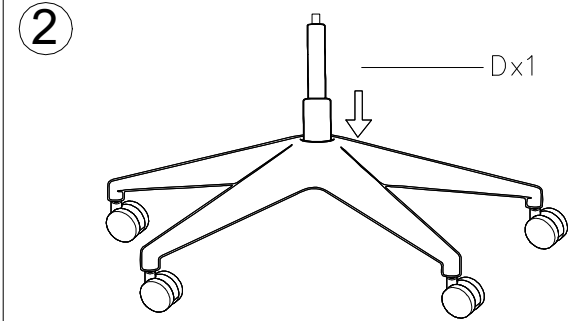
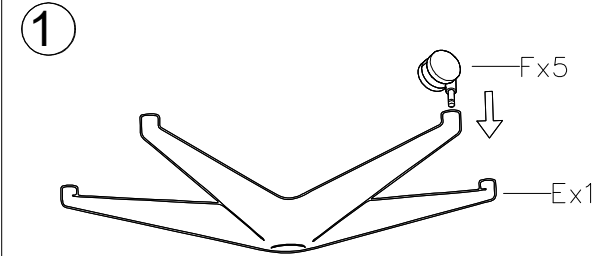


# Assembly Instructions

A		1	H	 M8x25	3
B		1	J	 M8x55	2
C		1+1	K	 M8x95	2
D		1			
E		1			
F		5			
G		1			



Remove the screws before installing the armrest

